

ATELIER

AUFBAUANLEITUNG 07/14

NOTWENDIGES WERKZEUG:

Innensechskant Schlüssel SW 4/5 (beiliegend)
Kreuzschlitzschraubendreher Gr.2


FÜR WANDMONTAGE BEI TWILL/ TWEED:

2 x 4,5 x 60 Schrauben (beiliegend)
2 x Unterlegscheiben (beiliegend)
2 x Distanzklotze 50x50 (beiliegend)
2 x Dübel je nach Wandbeschaffenheit
Bohrmaschine/ Bohrer

8 x XS Bolzen



8 x Verbinder Gehäuse




8 x Madenschrauben



Funktionsvideo:

<http://www.scheulenburg-direkt.de/index.php?page=content&colD=11>

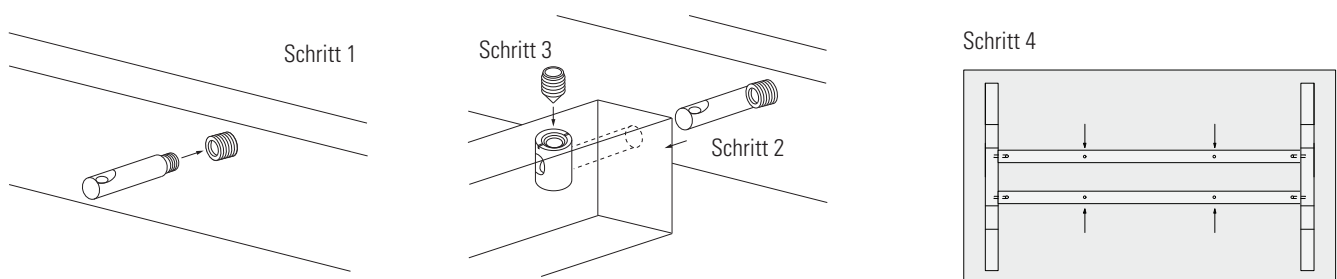

ZUSAMMENBAU DES GESTELLS:

1. Bolzen in Seitenteile schrauben.
2. Zargen auf die Bolzen stecken.
3. Verbinder mit Madenschraube fixieren.
4. Gestell an den Korpus schrauben.


Lässt sich die Madenschraube nicht komplett eindrehen, den XS Bolzen ein Stück heraus drehen und die Madenschraube erneut eindrehen.

Bitte beachten:

Das Möbel darf nicht geschoben werden, zum Transport etc. bitte immer an beiden Seiten anheben!

TWILL + TWEED:

TWILL und TWEED müssen aufgrund ihrer Statik immer an die Wand montiert werden. Für die Wandmontage je nach Wandbeschaffenheit die entsprechenden Dübel für die 4,5 x 60 Schrauben verwenden. Dabei die Distanzklotze zwischen der Möberrückwand und der Wand positionieren.

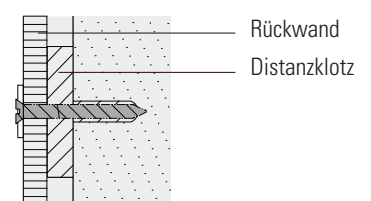

ATELIER

ASSEMBLY INSTRUCTION 07/14


TOOLS REQUIRED:

Allen screw SW 4/ 5 (enclosed)
Screwdriver size 2


WALL MOUNTED (TWILL + TWEED):

2 x 4,5 x 60 screws (enclosed)
2 x washer (enclosed)
distance pieces 50x50 (enclosed)
2 x dowels suitable to wall conditions

8 x XS bolts



8 x boxes




8 x grub screws



video:

<http://www.scheulenburg-direkt.de/index.php?page=content&colD=11>

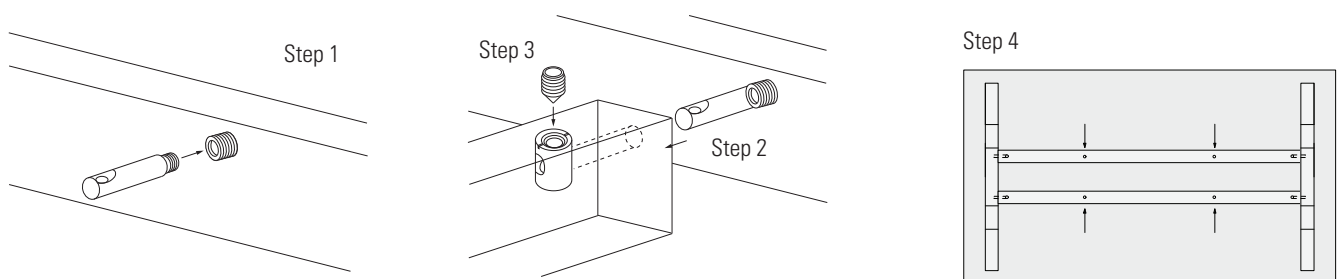

ASSEMBLY OF THE FRAME:

1. Screw the bolts into the sidepieces.
2. Slot the crosspieces onto sidepieces.
3. Fix the crosspieces with the grub screws.
4. Screw the frame onto the corpus.

If you cannot screw in the grub screw flushly, loosen connection and unscrew the bolt slightly. Then connect again.

PLEASE NOTE:

The furniture cannot be slide. For transport lift both sides!

TWILL + TWEED:

Due to their statics TWILL and TWEED must always be mounted on the wall.
Use suitable dowels (based on wall conditions) for mounting the furniture with the 4,5 x 60 screws.
The distance pieces need to be between rear panel and wall.

