






Aufbauanleitung 09/2019






NOTWENDIGES WERKZEUG:

Innensechskant Schlüssel SW4 / SW5 (beiliegend)

	10 x XS Bolzen
	10 x Verbinder Gehäuse
	10 x Madenschrauben
	16 x Confirmat Schrauben 5 x 50



Funktionsvideo:
<https://www.youtube.com/watch?v=ioIUTDqtvGE&list=PLC92853C2C2C26565&in>

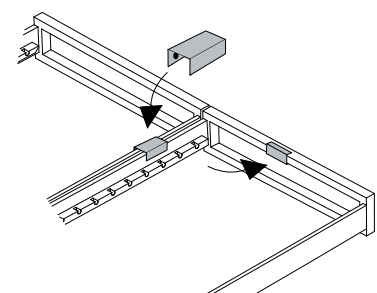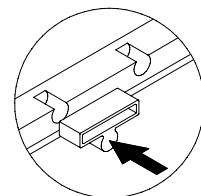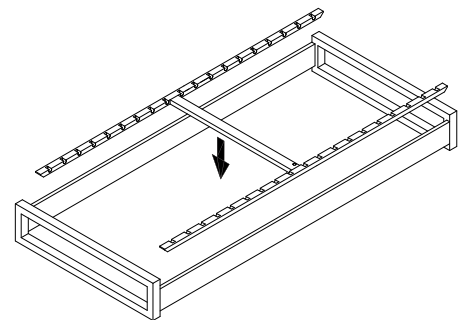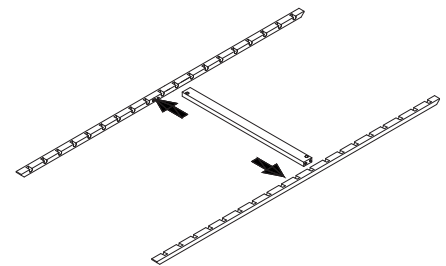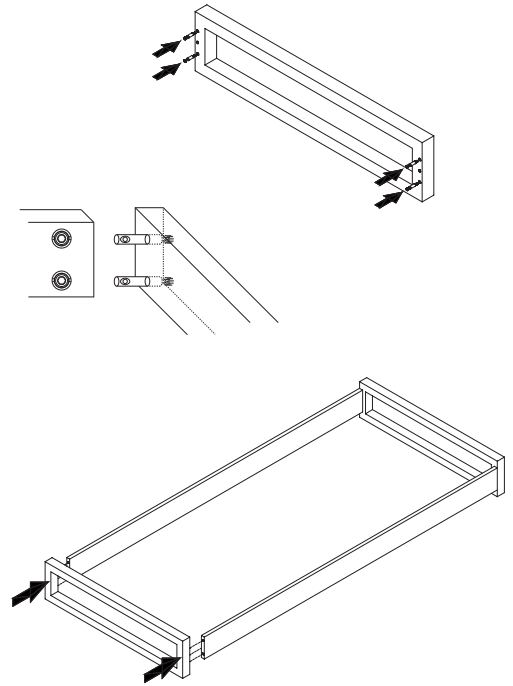






- 1** Vor der Montage Bettseiten mit Gehäusen bestücken, XS Bolzen entsprechend in die Kopf/Fußteile eindrehen. Dabei Bolzenloch passend zum Längsschlitz des Gehäuses ausrichten. Die XS Bolzen nicht bis zum Anschlag eindrehen.
- 2** Die Kopf/ Fußteile auf die Seitenteilen stecken und fixieren.
- 3** XS Bolzen mittig in die Auflageleisten eindrehen, Mittelaufgabeleiste mit Gehäuse bestücken, auf die Auflageleisten stecken und mit den XS Bolzen fixieren.
- 4** Die Auflageleisten mit den Confirmat- Schrauben an die Bettseiten anbringen. Wir empfehlen einen Matratzenüberstand von 5 cm. Werden zwei einzelne GUEST- Betten gestapelt, bitte darauf achten, dass die Auflageleisten auf gleicher Höhe liegen.
- 5** Die Kautschuk-Kappen in die entsprechenden Bohrungen der beiden Auflageleisten einsetzen.
- 6** Federleisten einzeln in die Kautschuk-Kappen einstecken.
- 7** Die GUEST Betten können mit Hilfe von 2 Aluminiumklammern verkoppelt werden. Dazu werden die Seitenrahmenparallel ausgerichtet und die Klammern von oben aufgesteckt. Bei Nichtgebrauch werden die Klammern hochkant auf das stirnseitige Rahmenprofil geschoben.

Assembly Instructions 09/2019

TOOLS REQUIRED:






Allen screw SW 4/ SW 5 (enclosed)

	10 x XS bolts
	10 x boxes
	10 x grub screws
	16 x Confirmat screws 5 x 50



video:

<https://www.youtube.com/watch?v=ioLUTDqtvqE&list=PLC92853C2C2C26565&in>

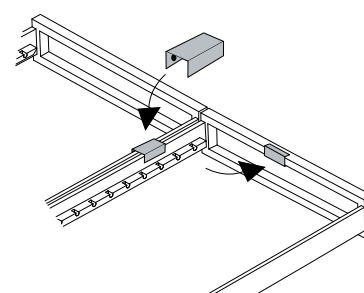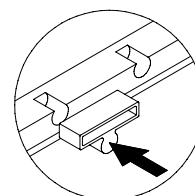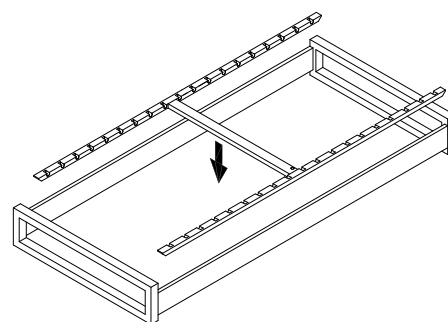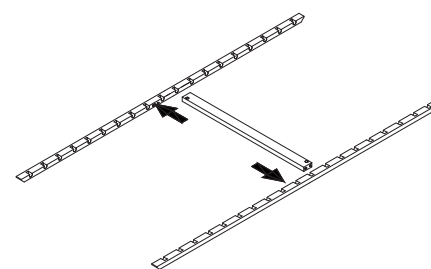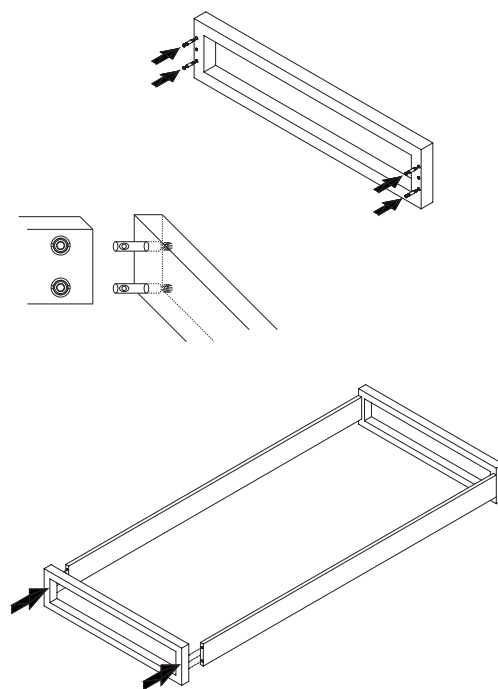

- 1** Prior to assembly insert the boxes into side parts, with longitudinal slot in the direction of the XS bolts. Insert and turn XS bolts accordingly into head- and footparts. Do not screw the XS bolt does up to the stop.
- 2** Put the head and base part on the sides and fix the screws.
- 3** Turn the XS bolts in the mattress supports, fit the traverse between the bed sides and tighten the joiners.
- 4** Fit the mattress support with the confirmat screws. We recommend a overhang of the mattress of 5 cm. When two GUEST beds are in use, ensure to use the supports on the same height.
- 5** Fit the rubber caps into the holes in both mattress supports.
- 6** Fit the sprung slats into the rubber caps.
- 7** The GUEST beds can be connected via 2 aluminum clamps. For this purpose place the bedsides parallel and join them with the clamps from above. For non-use please store the clamps upright at the front end of the bed.