


HIGH NOON US

ASSEMBLY INSTRUCTIONS 11/2011

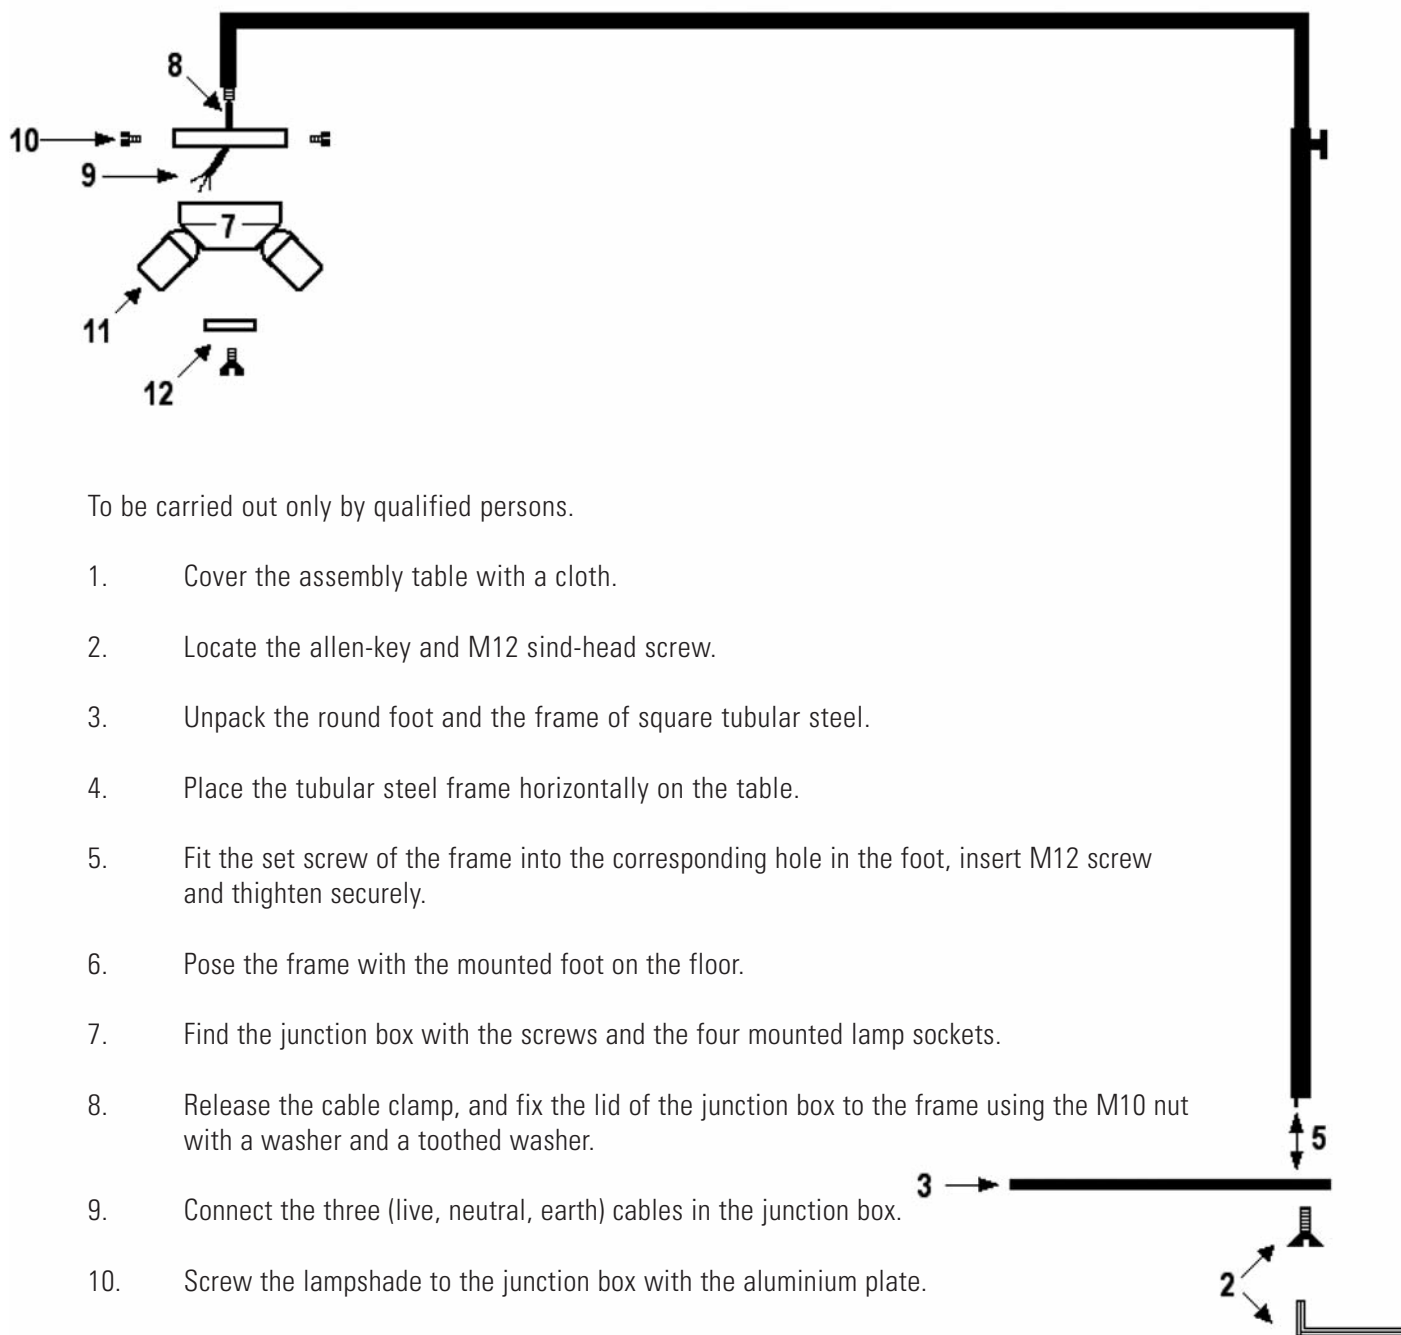

To be carried out only by qualified persons.

1. Cover the assembly table with a cloth.
2. Locate the allen-key and M12 sind-head screw.
3. Unpack the round foot and the frame of square tubular steel.
4. Place the tubular steel frame horizontally on the table.
5. Fit the set screw of the frame into the corresponding hole in the foot, insert M12 screw and tighten securely.
6. Pose the frame with the mounted foot on the floor.
7. Find the junction box with the screws and the four mounted lamp sockets.
8. Release the cable clamp, and fix the lid of the junction box to the frame using the M10 nut with a washer and a toothed washer.
9. Connect the three (live, neutral, earth) cables in the junction box.
10. Screw the lampshade to the junction box with the aluminium plate.
11. Screw the light-blubs into the four sockets, plug in the lamp and check the blubs and the dimmer.
12. Mount the diffusor onto the lampshade.
13. Remove fingerprints with a soft cloth.