


## assembly instructions 04/2021

### TOOLS:


allen key SW4 and SW5 (enclosed), crosstip screwdriver

- |                                |   |                                  |   |
|--------------------------------|---|----------------------------------|---|
| 16 x XS steel bolts            |  | 8 x cylinder head screws (M6x50) |  |
| 16 x grub screws               |  | with flat washers                |   |
| 16 x connector housings        |  | 4 x wooden mounting blocks       |   |
| 24 x confirmat screws          |  | 4 x flat head screws (M6x40)     |   |
| 3 x countersunk screws (M8x50) |  | 3 x adjustable centre feet       |   |

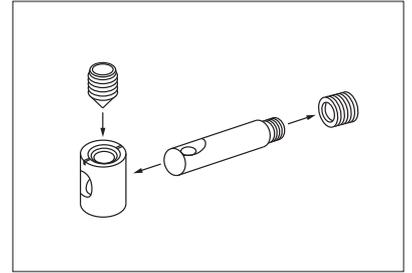


Watch this video for further information on the metal fitting:  
<https://www.youtube.com/watch?v=ioIUTDqtvGE>


Please assemble the bed **on a soft surface (e.g. a carpet or blanket)** to avoid damages.

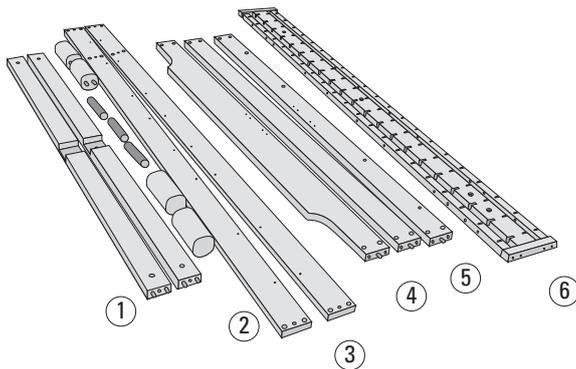


- |                              |                                       |
|------------------------------|---------------------------------------|
| <b>1</b> crossbars           | <b>4</b> footboard and headboard      |
| <b>2</b> bed and centre feet | <b>5</b> upholstery bar               |
| <b>3</b> side rails          | <b>6</b> centre rail and support bars |

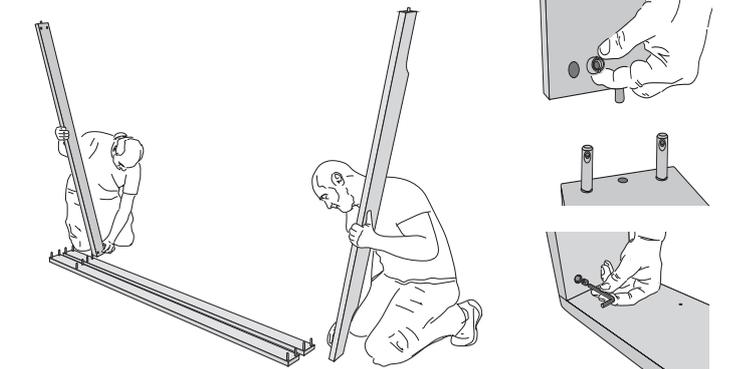


1. Screw XS bolts into side rails (3) and insert the connector housings into the foot and head sections (4) and crossbars (1). Align bolts and housings correctly! Mount foot and headboard (4) as well as the upholstery bar (5) to the side rails and fix with grub screws.

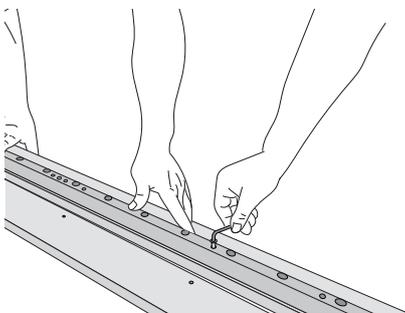


2. Mount the support bars (6) to the side rails (3) using confirmat screws. Screw in the remaining XS bolts.

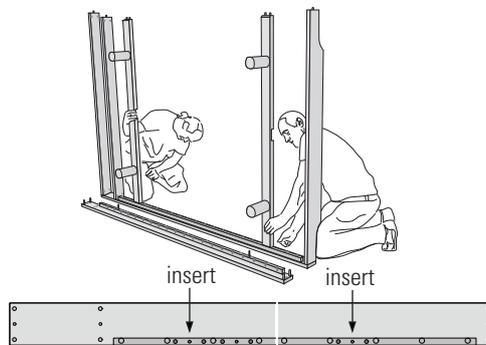


3. Place the two bed feet (2) on the crossbars (1) and attach them to the support bars (6). Then attach the second side rail (3) and fix it in place.

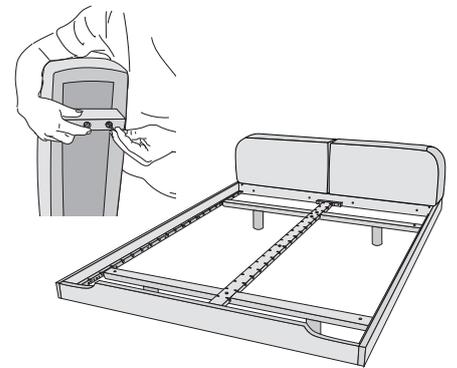


4. Attach the mounting blocks to the bottom of the cushion. Place the bed on its feet. Insert the cushions between the head rails (4, 5) the soft side of the cushion facing towards the front.

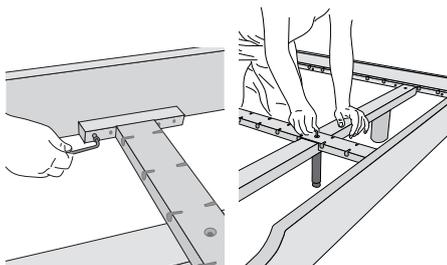

5. Insert the centre rail (6) and fix it with screws. Mount the adjustable centre feet (2) to the centre rail (6) using countersunk screws (M8).

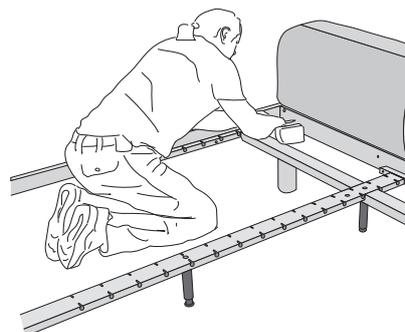

6. Fix the cushions using flat head screws (M6).

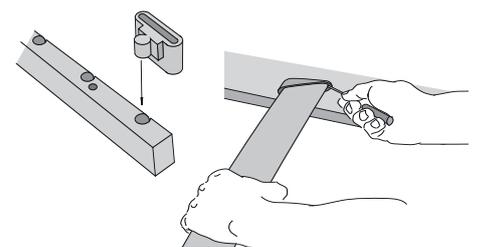

7. Insert the rubber caps into the holes in the mattress supports and fit the sprung slats into the rubber caps.