

Assembly instruction 03/2016

TOOLS:

Allen screw SW 5 (enclosed)


XS bolts




boxes




grub screws

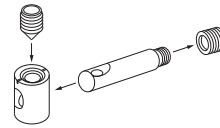


video:
<http://www.scheulenburg-direkt.de/index.php?page=content&colID=11>

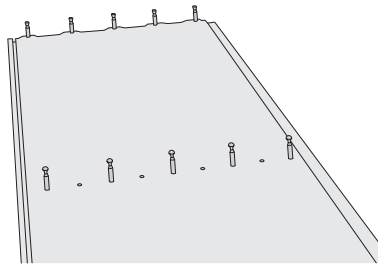


1. First mount KIN BASE. Afterwards screw the XS bolts into the holes provided at the bottom board.

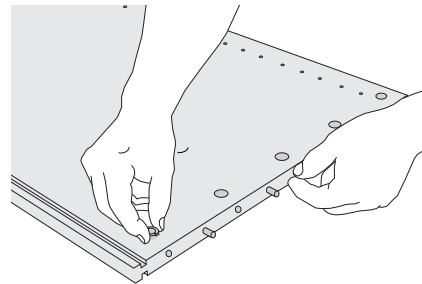


2. Put the boxes into the side pieces with the slots of the boxes in direction to the XS bolts (as on the drawing above).

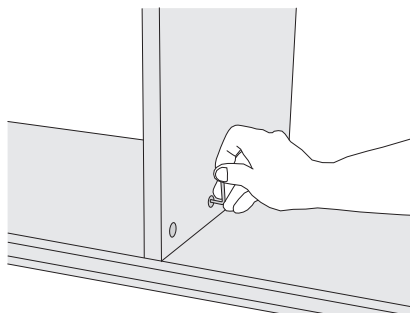

3. Place the side pieces onto the XS bolts in the bottom board and fix the side pieces with the grub screws.

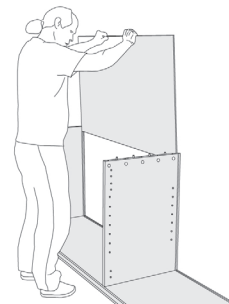

4. Slide the rear panels in.

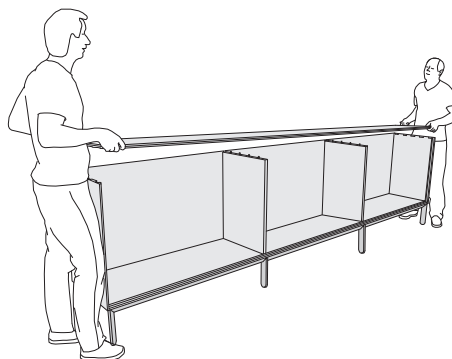

5. Screw the XS bolts into the holes provided at the top board. Starting on one side, put the top board onto the sidepieces and fix them with the grub screws.