SIMPLE Bold

ZEITRAUM

Assembly instructions 01/2022

TOOLS:

allen key SW4 und SW5 (enclosed), crosstip screwdriver

14x XS steel dowels
14x connector housings
14x grub screws
1x countersunk bolt (M8x60)
24x Confirmat screws
3x Spax screws (5x100)
3x Spax screws (6x140)
3x Spax screws (6x180)
1x center support foot, adjustable
3x distance blocks (100x60x50)
3x distance blocks (140x60x50)

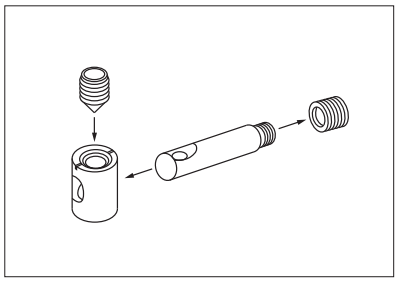

Watch this video for further information on the metal fitting:
https://www.youtube.com/watch?v=iolUTDqtvgE

*Please assemble the bed **on a soft surface (e.g. a carpet or blanket)** to avoid damages.*

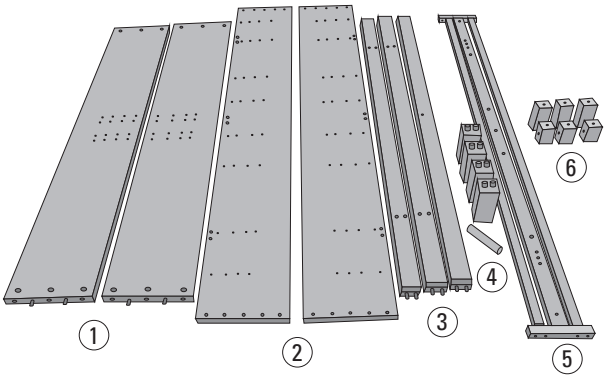

1 head and footboard
2 side rails
3 crossbars
4 bed and center support feet
5 center rail and support bars
6 distance blocks

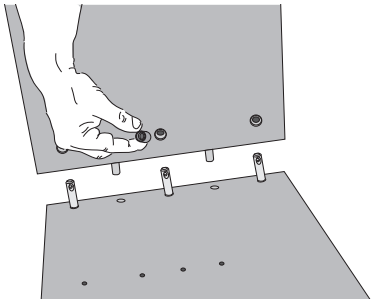

1. Screw XS dowels into the side rails **(2)** and insert the connector housings into head and footboard **(1)**. Align dowels and housings correctly!

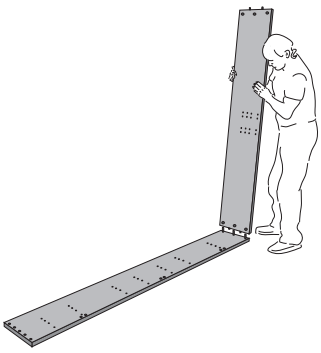

2. Attach the head and footboard to the side rail and fix them with grub screws.

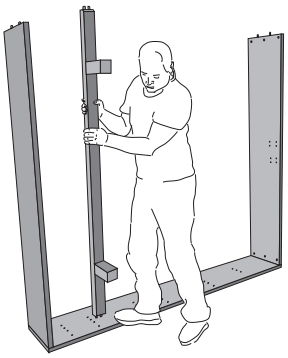

3. Attach the two bed feet to the crossbars. Mount the crossbars to the bed side. Fix the center crossbar with XS connectors.

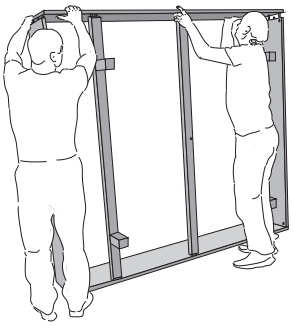

4. Connect the second side rail and fix it with grub screws.

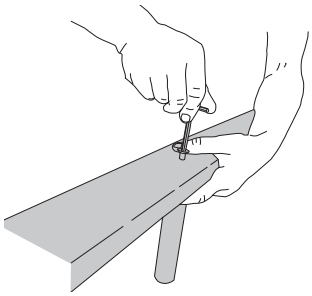

5. Connect the center support foot to the center rail with the countersunk bolt (M8x60).

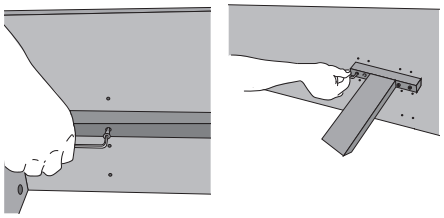

6. Fix the support bars and center rail using confirmat screws. Choose the right distance blocks and secure them with Spax screws in the right length (5x100, 6x140, 6x180).

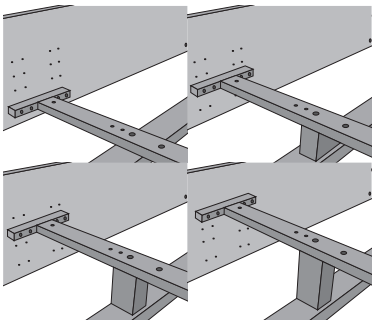

without distance block: insertion depth 24,5 cm
horizontal small distance block: insertion depth 18,5 cm
vertical small distance block: insertion depth 14,5 cm
vertical big distance block: insertion depth 10,5 cm

ZEITRAUM GmbH • Äußere Münchner Straße 2 • D-82515 Wolfratshausen • Tel + 49 (0) 8171 – 418130 • Fax + 49 (0) 8171 – 418141 • info@zeitraum-moebel.de • www.zeitraum-moebel.de